
Operations and Instruction Manual

Model #4075 Portable Concrete Anchorage Connector ANSI Z359.1-07 5,000 lbs / 22kn OHSA 1910.66 & 1926.502 Effective: 06/2010 Expires: 06/2020 IM-0049

3/4" SafeClaw Anchorage Connectors

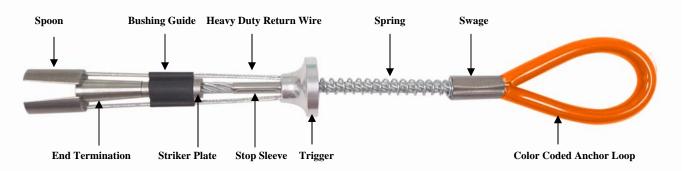

*** Warning ***

Do not use incompatible connectors with any SafeClaw Anchor. Refer to separate instructions supplied with your anchorage connector.

3/4" SafeClaw Fall Protection Anchor

- Model #4075
- Designed safe working load: 400 lbs.
- Tested ANSI Z359.1-2007
- OSHA 1910.66 & 1926.502
- Strength 5,000 lbs / 22kn
- Color coded in orange tubing

- 1. Follow all manufacturer's instructions.
- 2. Do not use incompatible connectors.
- 3. Always inspect your units prior to use.
- 4. Use the proper method of coupling to anchorage.
- 5. Remove unit for service if a fall has occurred.
- 6. Patch all holes with concrete when job is complete.
- 7. For use by one person only.
- 8. Pregnant women and minors must not use this product.
- 9. Designed safe working load is 400 LBS (149.3 kg). Do not exceed this weight.
- 10. Not for use with horizontal lifeline systems. Refer to item #4077.

Model #4075 SafeClaw 3/4" anchor is to be used in concrete substrate only. DO NOT use in steel, wood or any other substrate.

This product is designed for use in cured concrete only and may be pulled in all directions.

SafeClaw Fall Protection Anchor can be placed in:

* Horizontal surfaces * Vertical surfaces * Overhead / ceiling surfaces

IMPORTANT

All persons using this equipment must read and understand all instructions. Failure to do so may result in serious injury or death. If a fall occurs, the SafeClaw anchor must be disposed of according to the manufacturer instruction. Users should be familiar with pertinent regulations governing this equipment. All individuals who use this product must be correctly instructed on how to use this device.



Drilling for Fall Protection

This product is to be used by qualified fall protection personnel only. It is to be anchored in accordance with manufacturer's requirements in concrete substrate only. Do not anchor in uncured/wet concrete.

The SafeClaw model #4075 is color coded in ORANGE TUBING, and is to be used for *FALL PROTECTION ONLY*. This unit is not to be used in any other anchoring situation. Concrete must have a compressive strength of at least 3,000 PSI (20.7MPa)

- Drill a 3/4" diameter hole at least 3" deep.
- Blow hole clean with compressed air.
- Drill hole straight into substrate.
- When reusing a previously drilled hole always inspect the hole carefully to ensure adequate integrity.
- Insert unit 3 inches deep into hole.
- Set the unit with a slight tug on the anchor loop.
- The <u>Stop Sleeve</u> must always be partially inserted into the hole.
- Always inspect a previously drilled hole for deformation. Drill another proper hole if needed.
- Inspect the unit for damage each time you use it. If damage has occurred, dispose of unit.
- Never rely on a unit placed by unqualified workers.
- Remove your unit at the end of each day.
- Never leave a unit inserted in a hole overnight.
- Never drill hole closer than 6" to any edge or corner.

DO NOT drill anchor hole less then 6" from any corner.


- If a hole is 6" from an edge or corner the concrete substrate must be 12" thick and 12" wide (example - a 12" x 12" column)
- If a hole is 8" from an edge or corner the concrete substrate must be 10" thick and 16" wide (example a 10" x 16" column)
- If a hole is 10" from an edge or corner the concrete substrate must be 8" thick and 20" wide (example a 8" x 20" column)
- If a hole is 12" or more from any corner or edge the concrete substrate must be 5" thick.

It is important that you drill your SafeClaw anchor hole to the manufacturer's required depth and hole structure. All holes must be 3/4" in diameter and drilled at least 3" into the substrate. The bored hole walls must be straight and parallel. NOTE: The bored hole must be of uniform diameter and free of peaks and valleys on the inner wall surfaces. Only use quality industrial grade rotary hammers and rotary hammer drill bits.

NEVER USE A BENT DRILL BIT!!

Drill a straight 3/4" diameter hole at least 3" deep into your substrate utilizing a rotary hammer drill that uses industrial grade SDS bits.

Only use industrial grade rotary hammer drills and drill bits. <u>DO NOT USE masonry drill bits</u>

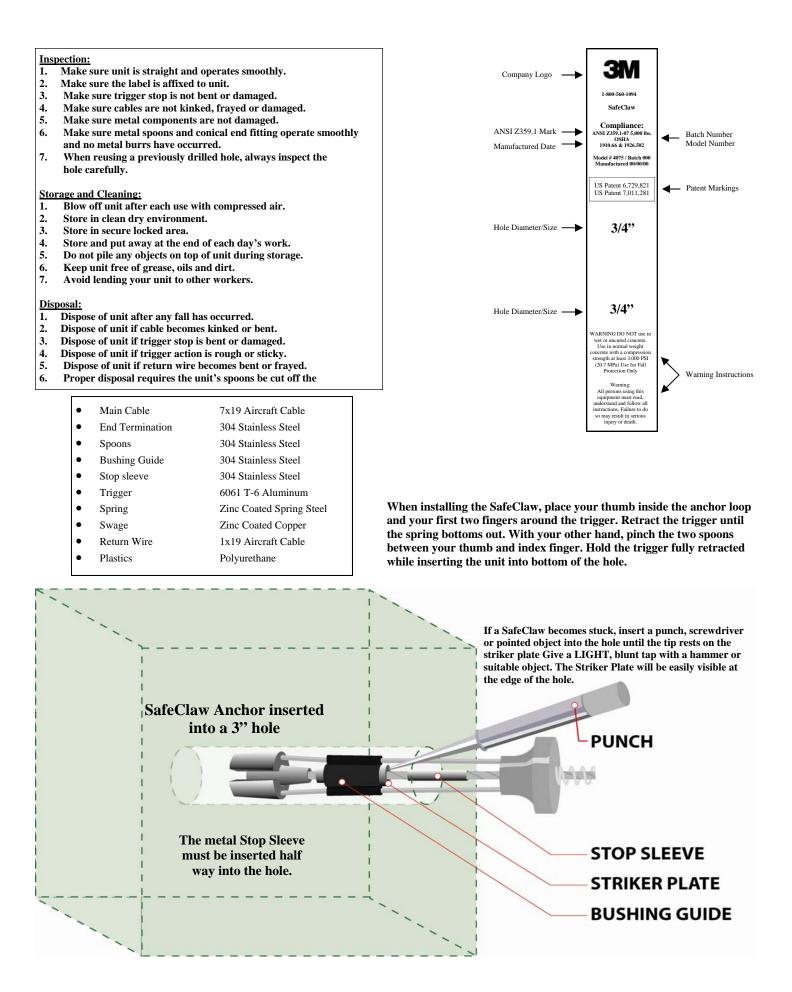

INSPECTION AND MAINTAINANCE LOG

DATE OF MANUFACTURE:

MODEL NUMBER: _____

DATE PURCHASED: _____

Date	Pass Fail	Corrective Action	Name of Inspector	Signature

FOR MORE INFORMATION

In United States, contact:

Website: www.SafeWaze.com Technical Assistance: 1-800-560-1094 Fax: 1-800-560-1275

3M Occupational Health and Environmental Safety Division

4451 Raceway Drive South West Concord, NC 28027 USA Customer Care Center: 1-800-328-1667

